

HOW TO MEASURE A ROLLER



Roller Measurement Details

- 1. B.F.R. (Between Frame Rail):**
Measure the distance from inside frame to inside frame.
- 2. Roller Outside Diameter:**
Measure the outside diameter of the roller. (Reference Almac Standard sizes).
- 3. Hex Size Flat-Flat:**
Measure the thickness of the HEX Axle from flat to flat (Reference Almac standard sizes).
- 4. Roller Thickness:**
The thickness of the wall of the roller tube, in either GA. or inches. (Reference Almac standard sizes).
- 5. Frame Thickness:**
Measure the thickness of the frame where the axle passes through. (To be used when cottering the axle).

